


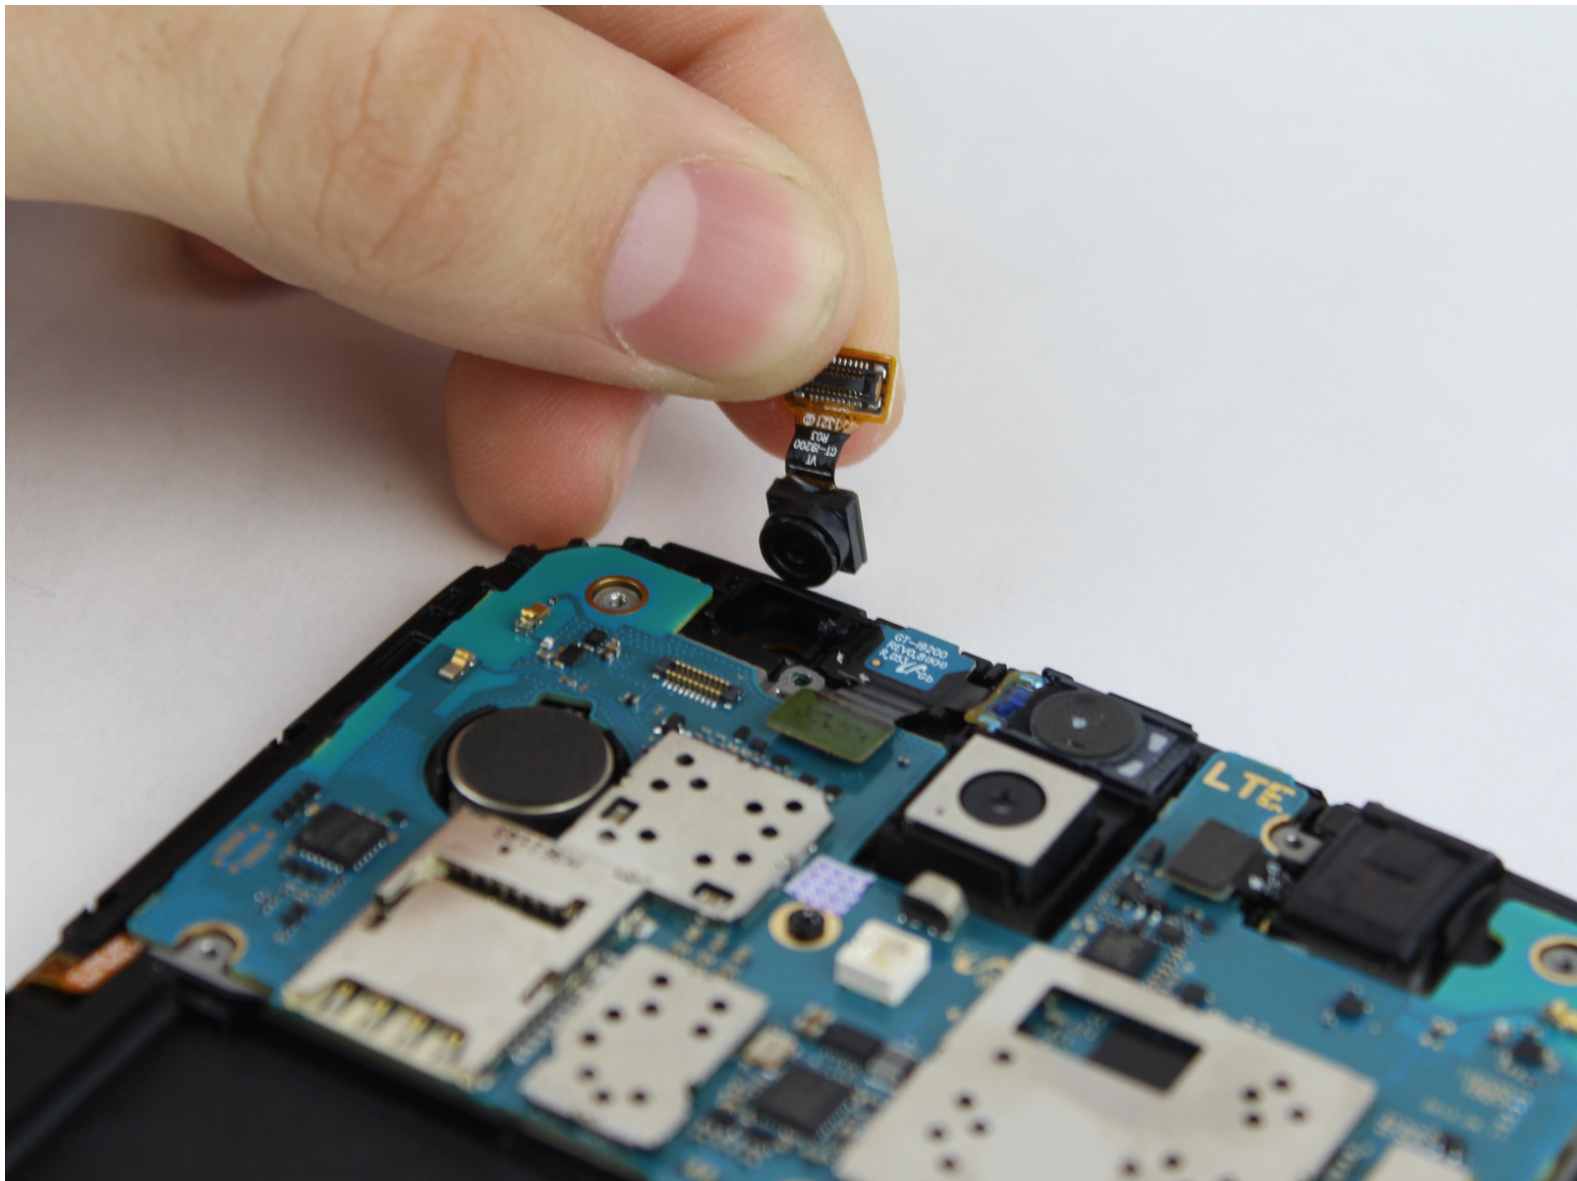

Samsung Galaxy Mega Front Facing Camera Replacement

Replacement guide for the front facing camera.

Written By: Max Rathman



INTRODUCTION


This guide instructs on how to replace the front facing camera.



TOOLS:



- [Metal Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

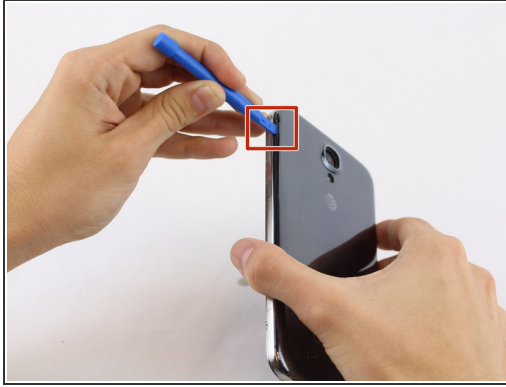


- Before starting, ensure device is completely turned off.
- On the back of phone, locate the slot on the top left corner.
- Insert plastic opening tool or fingernail and pull up on the back plate.
- With the corner released, slide your finger around the device between the back plate and the phone to release connectors.

Step 2

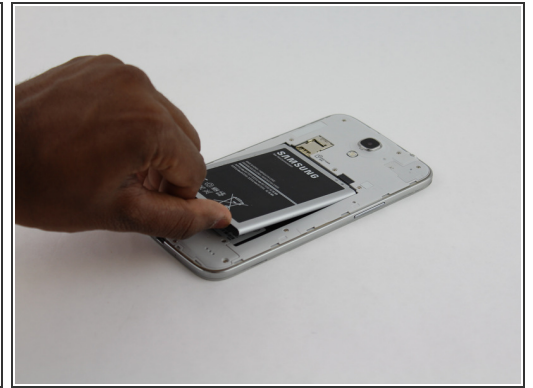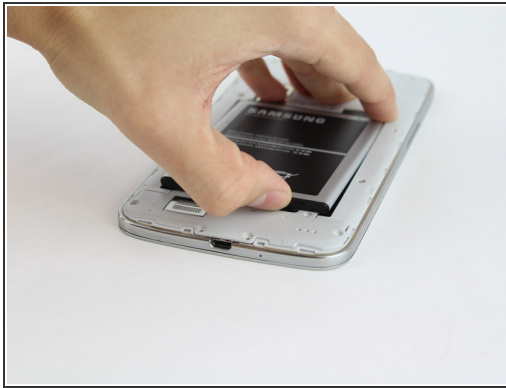

- Insert fingernail into the slot on bottom of battery and gently pull up.
- Remove the battery.

Step 3 — Midframe

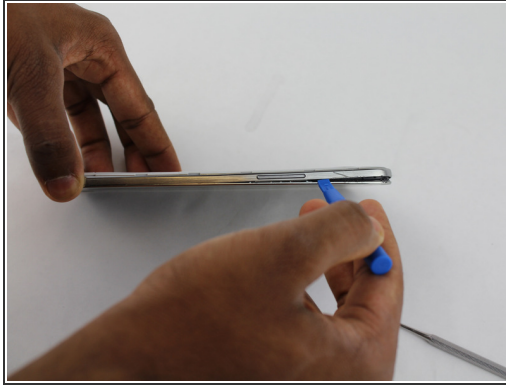


- Remove the 14 3.45 mm Phillips #000 screws from the assembly.
- Gently, insert plastic opening tool into seam above the volume buttons of your phone.
 - ⓘ You may substitute metal spudger for plastic opening tool to first start the opening of the seam. This may cause exterior cosmetic damage.

Step 4




- Slowly slide plastic opening tool around the device to release all the connectors internal to the device.
- The device should easily come apart after the plastic opening tool is slid around the entire device.
 - ⓘ During reassembly, ensure volume and power buttons align properly.

Step 5 — Front Facing Camera

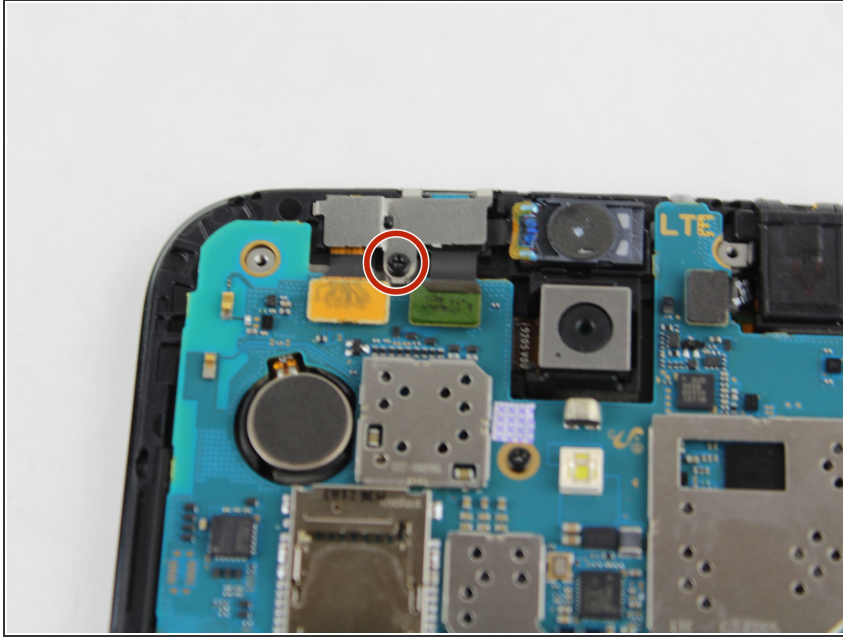



- Remove the one 2.55 mm Phillips #000 screw from top left of motherboard assembly.

Step 6

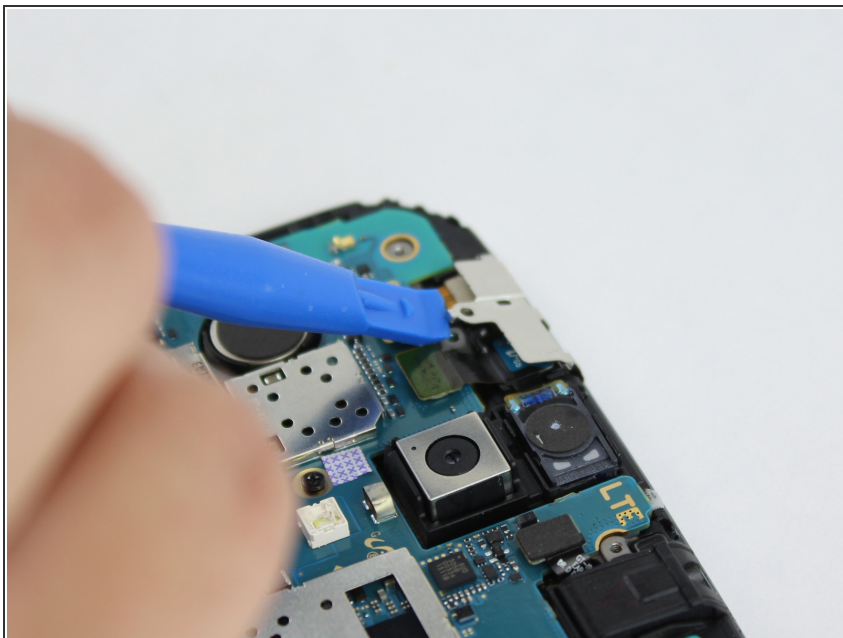

- Remove metal cover with plastic opening tool.

Step 7

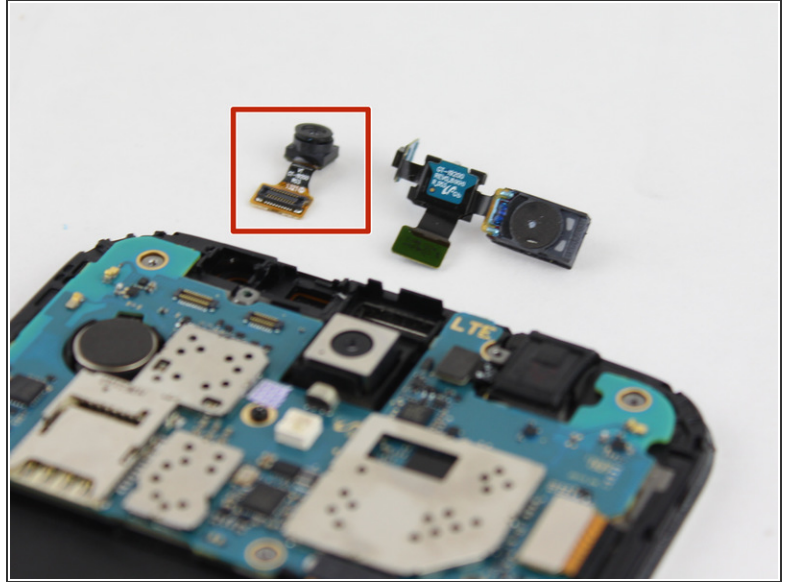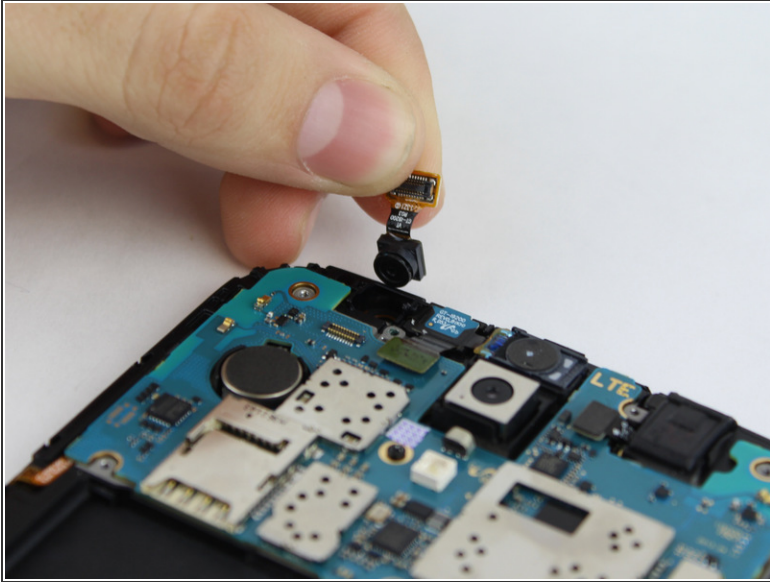

- Lift the motherboard connector and remove the camera assembly from phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 09:50:12 PM.